

THANK YOU FOR PURCHASING THE VEXILAR PRO PACK.

Your new Pro Pack comes pre-assembled with everything you need to start fishing. There are several things that you need to know before you use the system for the first time.



Stopper

Float

Transducer

Ice-Ducer System

1. The power connections are pre-wired, but the unit is shipped with the battery disconnected so that it will not discharge while the package is on the store shelf. You must connect it before you can use the Pro Pack. Simply push the connectors onto the proper terminals (red for positive and black for negative). See the other side of this sheet for complete battery charging instructions.

2. The Ice-Ducer is designed to hold your transducer level at the desired depth below the water surface. Just slide the stopper along the cable (stick your finger in the slot to make it slip easier) and set the distance between it and the bottom of the transducer to the approximate thickness of the ice.

3. The eye-bolt is provided in case you don't want to use the Ice-Ducer's float to support the transducer in the ice hole. The eye-bolt screws into one of the three threaded holes on the right, left and front sides of the carrying case. Thread the locking nut onto the bolt first, then thread the eye-bolt into the hole. Tighten the nut against the carry case

only slightly to keep it in place. Be sure to remove the float from the transducer cord by pulling it through the slit in the side of the float. Hang the Ice-Ducer from the eye-bolt by setting the stopper in the semi-circle at the end of the bolt.



4. Make sure that when you're done using your Pro Pack you recharge the battery. You DO NOT need to disconnect the flasher before charging. Disconnect the battery before long storage periods and remember to top it off every couple of months when you're not using it.

5. Watch the included video information and read the included owners manual for complete instructions on how to operate and interpret the flasher unit.

BATTERY CHARGING AND MONITORING


Your Vexilar Pro Pack system comes with a high quality sealed lead acid battery. In order to insure maximum running time for your flasher and maximum battery life, you need to follow some simple charging rules. The included charger is specifically designed for this battery. The charger is also protected internally from reverse hook up and short circuits. As long as you follow these instructions, you can expect many hours of use and many years of service from the battery.

To CHARGE THE BATTERY

1. Plug the charger into a standard 110 Volt AC wall outlet. Make sure the charger's light is on.
2. Connect the red charger clip to the positive battery terminal and the black clip to the negative terminal. The charger's light should turn off. This indicates that the battery is now accepting a charge.
3. Let the battery charge until the charger's light comes back on. Make sure you wait until it gets to full brightness. Charge times can range up to 48 hours for a completely dead battery. Do not leave the charger connected to the battery for more than 48 hours after the light has come on to full brightness. **Tip** - For faster charges with automatic shutoff, see your dealer about the optional V-300 Charger.
4. Fully recharge the battery after each use. Be sure to charge it soon after you are done using it. However, do not charge it when it is cold. Bring the battery indoors and allow it to warm up for at least one hour before connecting the charger. You **DO NOT** need to disconnect the flasher while charging.
5. For battery storage, make sure it is disconnected from the system. Charge it every month or two to insure that it maintains a full charge during the storage period.

DETERMINING THE BATTERY'S LEVEL OF CHARGE

The Battery Status Indicator attached to the handle of your Pro Pack is designed to allow you to see the level of charge in the battery while in use. The POWER ON light indicates that the battery is connected properly. The middle three lights indicate the approximate percentage of charge remaining. The top light is used only while charging.

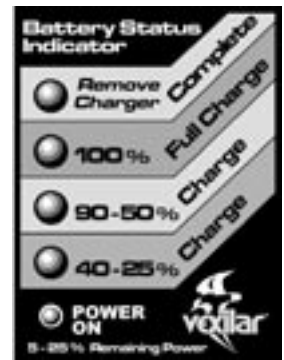

Notice that the charger and the status indicator both have lights that tell you when the battery is fully charged. The charger's light will likely turn on first. The Status Indicator will remain at the FULL level during most of the charging time and the "Charge Complete" light may never come on. This is because the Vexilar charger is designed to bring the battery to a safe level and hold it there, avoiding overcharge. **Remember, the charger's indicator light is your primary indicator. Use this light to tell you when your battery is fully charged.** If you should ever charge your battery with a charger other than the one included, then use the Battery Status Indicator's light as your "charge complete" indicator.

It is important to note that the percent of charge shown will vary with the temperature and battery load. The most accurate reading will be shown when the flasher is running and the temperature is above 50 degrees.